

The DressFitter

Family Dress Form

WARNING

Before attempting to assemble your new DressFitter Dressform, please insure that all parts and accessories are included in the package. Please contact your retailer if any parts or accessories are missing or damaged.

Read and understand all instructions before use. Failure to follow proper instructions listed might result in injuries or damage to the item.

For additional information regarding your DressFitter, please contact our Customer Service Department by emailing us at customerservice@feiyueusa.com . You can also submit written requests via FAX at (909)613-5808.


ASSEMBLY INSTRUCTION

- Attach legs to the included base. Secure each leg to the main base from the bottom. Place included plastic caps on to the unflared ends. The base should look like as shown as the picture to the right.



Important: Ensure all 3 base rods are secured before setting the dress form up.

- Position the height adjuster to its proper level. Slide the body of the DressFitter onto the stand. Tighten wing nut to secure the DressFitter to the main pole. Loosen the wing nut to turn the DressFitter.

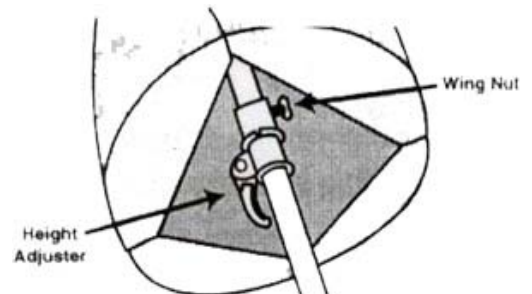

GETTING READY TO USE THE DRESSMAKER


- For best results, obtain your body measurements before using your new DressFitter. For accuracy, it is suggested that you wear your normal undergarments as well as shoes.

- Take measurements at the fullest part of each body area being measured.

- Record your measurements in the space available below.

Neck _____ Bust _____ Waist _____ Hips _____

Back Waist Length _____ Full Body Length _____

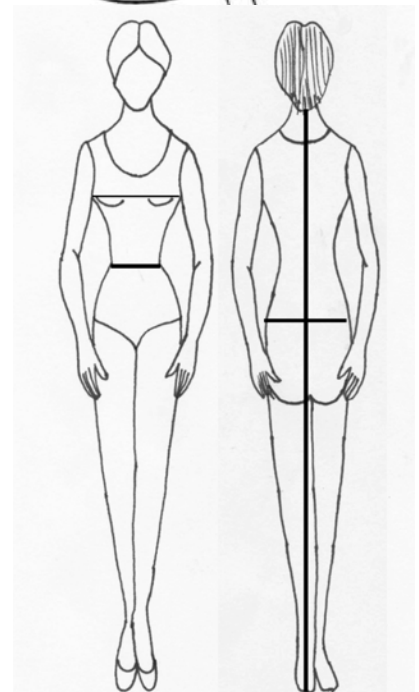

SAVE THESE INSTRUCTIONS

Servicing should be performed by an authorized service representative.

This product is intended for household use.