

The FashionMaker

Adjustable Dress Form

WARNING

Before attempting to assemble your new FashionMaker Dressform, please insure that all parts and accessories are included in the package. Please contact your retailer immediately if any parts or accessories are missing or damaged. Failure to report damages or missing accessories immediately will hinder our ability to supply/replace those parts for you.

Read and understand all instructions before use. Failure to follow proper instructions listed might result in injuries or damage to the item. Do not overstretch the dress form pass its intended dimensions. If you require a larger unit, simply contact your retailer and replace it with a larger size unit.

For additional information regarding your FashionMaker, please contact our Customer Service Department by emailing us at customerservice@feiyueusa.com . You can also submit written requests via FAX at (909)613-5808.

ASSEMBLY INSTRUCTION

- Attach the metal legs to form the X shape that is shown in the picture.

Important: Insert the metal legs into the main pole by attaching it to the plastic cup section at the end of it as is shown in the picture. Insure that the metal legs are locked into the main pole but turning the metal legs in the lock position notch.



- Position the height adjuster to its proper level. Slide the body of the FashionMaker onto the stand. Tighten wing nut to secure the FashionMaker to the main pole. Loosen the wing nut to turn the FashionMaker.

GETTING READY TO USE THE DRESSMAKER



- For best results, obtain your body measurements before using your new FashionMaker. For accuracy, it is suggested that you wear your normal undergarments as well as shoes.

- Take measurements at the fullest part of each body area being measured.

- Record your measurements in the space available below.

Neck _____ Bust _____ Waist _____ Hips _____

Back Waist Length _____ Full Body Length _____

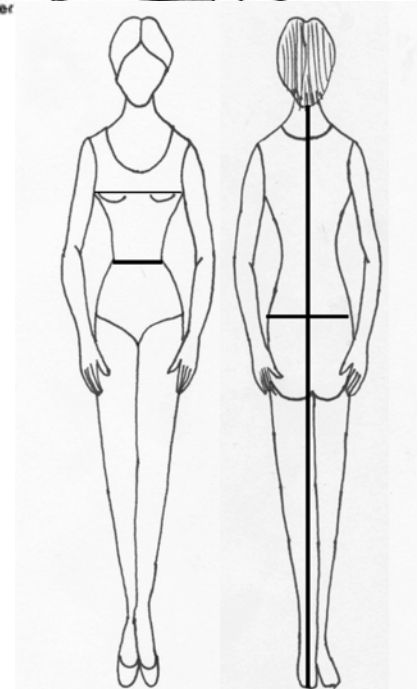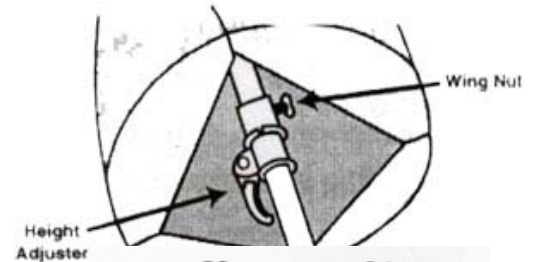

SAVE THESE INSTRUCTIONS

Servicing should be performed by an authorized service representative.

This product is intended for household use.

FASHIONMAKER BODY MEASUREMENT ADJUSTMENTS

NECK ADJUSTMENTS – To adjust the neck size, simply use the included Adjustment Tool at the adjustment station and turn the knob clockwise. The size will change in small increments. **DO NOT OVERSTRETCH SIZES!**

BUST & HIPS – The DressFitter features 4 bust adjustment stations and 4 hips adjustment stations. To increase bust in hip sizes, use the included tool to adjust at small increments. Both measurements in inches and centimeters are shown on the dial. **DO NOT OVERSTRETCH SIZES!**

WAIST – 2 adjustment stations are provided at the waist area for adjustment. Gradually adjust the waist wheels in conjunction with the bust and hips adjustments for best results. **DO NOT OVERSTRETCH SIZES!**

BACK WAIST LENGTH – To get an accurate measurement of your back waist length, measure the distance from your neck toward your waistline. Depending on your body shape and measurements, the mark may fall above or below the waistline tape on the FashionMaker.

IMPORTANT

All adjustments should be done gradually, in small increments and evenly (across all stations) to avoid damaging or over-stressing any of the adjustment stations as well as to avoid tension in the adjustment system that would make the Fashionmaker harder to be adjusted or to even damage your unit. By increasing or decreasing adjustments evenly across all stations will insure that your dressform will operate correctly. If you require a larger unit, simply contact your retailer and replace it with a larger unit. By forcibly over-stretching a particular adjustment station, you could cause damages to the unit which is not covered by the manufacturer's warranty. It is recommended that you adjust every station in small increments to reach your desired size.

HOW TO USE THE PIN HEM MARKER

Lower the hem bar to the horizontal position. Select the hemline position. Unlock the hem marker and slide it up or down on the pole until the pin slot falls on the desired hem length. Lock hem marker in place.

To mark the hem, place fabric between the plastics clamps and insert a pin through the slot near the top of the clamp. Repeat process around the hem.

ADDITIONAL FITTING TIPS

You can add padding to accommodate certain body features such as a curved back, high hip or protruding abdomen. You can accomplish this by filling the area with a pad then securing it with pins or double-sided tape.

TOP ADJUSTMENT DIAL

Two types of Adjustment dials are present on the The FashionMaker Dressform. Please view the location of each type here. (Size S/M) (Size P/L)

CONGRATULATIONS AND THANK YOU FOR PURCHASING YOUR NEW FASHIONMAKER DRESSFORM.

PLEASE SAVE THIS MANUAL FOR FUTURE REFERENCE.


RFUNG0210



Adjustment Station



Adjustment Tool

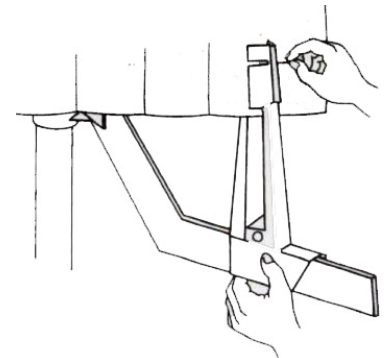

Petite/Large Top Adjustment Dial



Small/Medium Top Adjustment Dial